


EVOLUTION RANGE


FLOODLIGHT




Access to control gear and relamping effected by use of single retained socket head cap screw

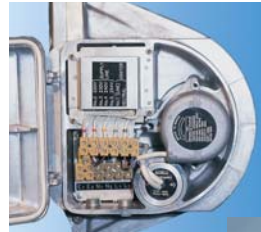

View shows the complete access afforded by opening the gear cover. The mains terminal block and voltage tapping can be clearly seen and are readily accessible

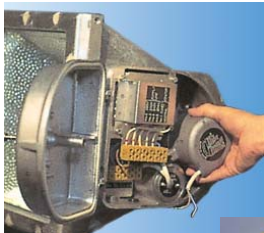

The lamp enclosure is easily removed by disconnecting the lamp supply cables and rotating the housing to disengage from the locating spigots

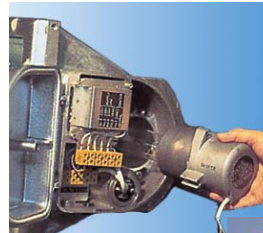

The lamp housing can then be withdrawn to allow replacement of the lamp and/or inspection of the flamepath. With this done the lamp housing can be inserted back into the enclosure and located on the spigots and the cables connected. The whole operation from start to finish takes less than 3 minutes



EVOLUTION JUNIOR MOUNTING ACCESSORIES



Accessories (Should be ordered separately)

Floor stand assembly (to be ordered with floor stand version of floodlight)

Tripod stand assembly

Catalogue Order Code



SEVJR-0001

SEVJR-0002

SERVICING & MOUNTING ACCESSORIES


POLE MOUNTING BRACKET

Cat No. SEV04-0001

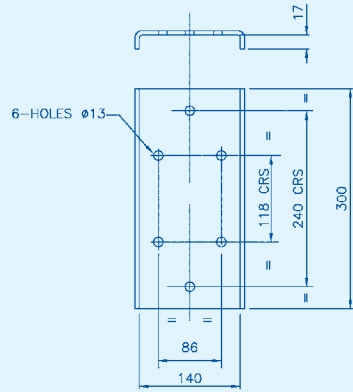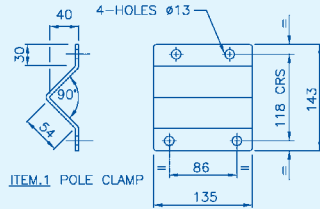

284 RETROFIT BRACKET



Cat No. SEV01-0001

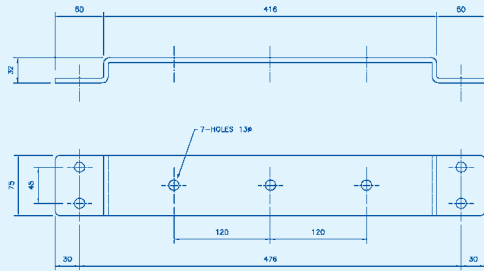

SWING JIB DAMPER & BRACKET ASSEMBLY



Damper assembly - SEV01-0015

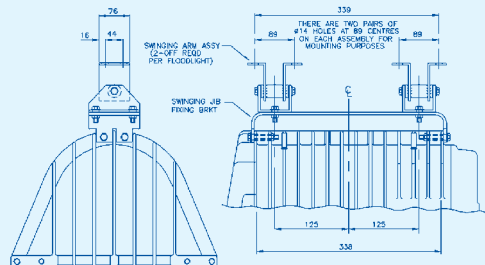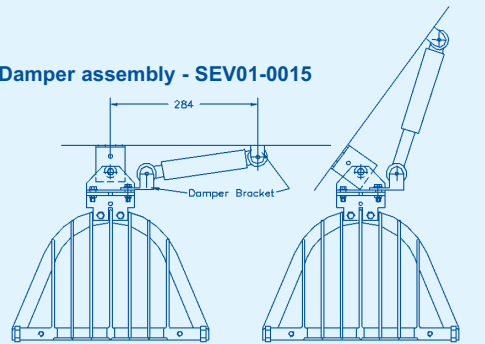

Bracket assembly - SEV04-0009

